

Радиосистема P2T,P2L >>> Инструкция

Благодарим вас за выбор продукции SYNCO.
Пожалуйста, прочтите внимательно все предупреждения и инструкцию по эксплуатации перед использованием.
Пожалуйста следуйте всем указаниям в данной инструкции.

 
Примечания по использованию

- Храните изделие в сухом, чистом месте.
- Держите изделие вдали от агрессивных химикатов и источников тепла.
- Для очистки изделия используйте только мягкую и сухую ткань.
- Неисправность изделия может быть вызвана падением или воздействием внешней силы.
- Не пытайтесь самостоятельно разобрать изделие. Это приводит к потери гарантии.
- Диагностику и ремонт изделия производите только у авторизованных специалистов,если возникли какие-либо неполадки.
- Несоблюдение инструкции может привести к механическим повреждениям.
- Гарантия не распространяется на человеческий фактор.

Комплектация



Элементы и функции управления

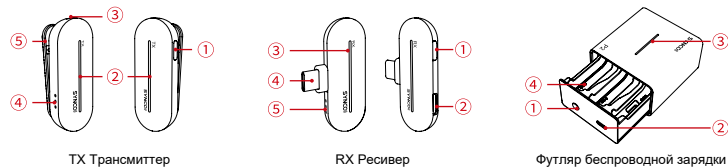

TX Трансмисмиттер

- 1 Включение
- 2 Индикатор рабочего состояния
- 3 Встроенный микрофон
- 4 Контактная Группа
- 5 Клипса

RX Ресивер

- 1 Звуковые эффекты/Моно/Стере
- 2 Разъем USB-C/Lighting (в зависимости от модели)
- 3 Индикатор рабочего состояния
- 4 Коннектор
- 5 Контактная Группа

Футляр беспроводной зарядки

- 1 Подключение/Питание
- 2 Разъем USB-C
- 3 Индикатор рабочего состояния
- 4 Контактная Группа

Индикатор —TX Трансмисмиттер (нажмите дважды "Включение", что-бы активировать индикатор)

Индикатор рабочего состояния (Белый)	Вспыхивает одновременно	Система не подключена
	Вспыхивает последовательно (3в. эф. выкл.)	Система подключена, В рабочем состоянии.
	Горит один сегмент (3в. эф. выкл.)	
	Single light flashes	Низкий заряд батареи
Индикатор рабочего состояния (Красный)	Горит один сегмент (В Футляре)	Зарядка, выключится при полном заряде

Индикатор — Ресивер

Индикатор рабочего состояния (Белый)	Вспыхивает одновременно	Система не подключена
	Вспыхивает последовательно	Система подключена
	Первый сегмент вспыхивает один раз, остальные последовательно	Моно - Оригинальный звук
	Первый сегмент вспыхивает дважды, остальные последовательно	Моно - Звуковые эффекты вкл.
	Средний сегмент горит постоянно, остальные последовательно	Стерео - (Только Оригинальный звук)


Индикатор — Футляр

Индикатор рабочего состояния (Белый)	Вспыхивает последовательно	Система подключена
--------------------------------------	----------------------------	--------------------

Operations


1. Usage

 - 1 Tap on the right side of charging case to pop out the drawer
 - 2 Take the TX and RX out
 - 3 TX should boot automatically as it leaved the case, and switch itself off automatically when returning to the case.
- (Forcible switch: Long press the Power button on TX for 3 seconds)
- 4 RX should boot automatically as it is plugged into smartphone

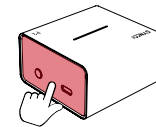

2. Pairing

 - 1 Place the TX and RX in the case with their contacts are connected with the case's
 - 2 Long press the Pairing button on the case for 3 seconds with the drawer open
 - 3 The indicators on the TX and RX should light up and illuminate sequentially when pairing is successful
- Note: The transmitter will automatically switch off if it is unpaired or disconnected for 5 minutes.

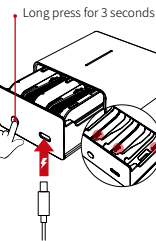

3. Charging

Charge the TX: Place the TX in the case with contacts connected with the case's.
Charge the case: Connect the case with power supply via the charging cable.

 
4. Check the power

TX: Short press the Power button, the indicators will light up according to remain power for 5 seconds
Charging Case: Short press the Power Prompt button, the indicators will light up according to remain power for 5 seconds

5. Use vocal effects

Short press the Vocal Effects button on the receiver to switch sound effects: Original >> Studio FX >> KTV FX >> Voice Amplification >> EDM (Electronic Dance Music) >> Baby FX >> Male to Female >> Female to Male >> Monster FX.
Default effect: Original.
Note: The vocal effect will apply to both transmitters. In Stereo mode, only original is supported. Other vocal effects are unavailable.

6. Mono/ Stereo



7. Charging phone device

Plug your phone charging cable into the Type-C Port on the receiver.

8. In-Ear monitoring

Plug the included Type-C to 3.5mm Adapter into the Type-C Port on the receiver. Then plug in your headphones to real-time monitor mic recording and device’s backgrounding.

Note: The included Type-C to 3.5mm Adapter is exclusive, not available for other devices.

Specifications

TX Transmitter	
Wireless Transmission	Digital 2.4GHz
RF Frequency Band	2400-2483.5MHz
Frequency Response	20Hz-20KHz
Working Distance	492ft/150m(LOS area); 164ft/50m(NLOS area)
Sampling Rate	48KHz
Bit Depth	16Bit
Sensitivity	-26dB
SNR	>75dB
RF Output Power	10dB
Battery Type	Built-in Lithium Battery, 120mAh
Battery Charging Time	1.5H
Battery Life	5H
Dimensions	49x19x19 (mm)
Material	ABS
Weight	10g

RX Receiver

Wireless Transmission	Digital 2.4GHz
RF Frequency Band	2400-2483.5MHz

Working Distance	492ft/150m(LOS area); 164ft/50m(NLOS area)
Sampling Rate	48KHz
Bit Depth	16Bit
Antenna	Built-in
Monitoring	3.5mm In-Ear Monitoring
Connector	Type-C Output
Power Input	Type-C
Dimensions	49x30x9 (mm)
Material	ABS
Weight	5g

Wireless Charging Case

Battery Type	Built-in Lithium Battery, 700mAh
Battery Charging Time	2H
Charging Port	Type-C Port
Power Requirements	5V 2A
Dimensions	70x68x38mm
Weight	87.5g

Warranty

Warranty Period

Thank you for purchasing SYNCO products.

- Customers are entitled to free replacement or repair service in case of quality defect(s) found in the product under normal use within 30 days upon receipt of the product.
- Original SYNCO products are entitled to 12-month limited warranty service. The warranty period begins on the date of purchase of brand new, unused products by the first end-user.

Within the warranty period, if product defect or failure is attributable to material defection or technological problem, the defective product or defective part will be repaired or replaced without charge (service and materials fee).

Warranty Exclusions and Limitations

- Faults resulted from inappropriate use of a product without following its operation specification
- Artificial damage, e.g. crash, squeeze, scratch, or soaking
- Modifications to a product by its user or a third party without prior written consent of SYNCO, e.g. replacement of element or circuit, label alteration
- The code on product is inconsistent with that of warranty certificate, or the code on the product or warranty certificate is altered or torn off
- All consumable accessory attached to a product, like cable, wind muff, battery
- Faults as a result of force majeure, such as fire, flood, lightning, etc.

Warranty Claim Procedure

- If failure or any problem occurs to your product after purchase, please contact a local agent for assistance, or you can always contact SYNCO’s customer service through email at support@syncoaudio.com.
- Please retain your sales receipt and warranty certificate as proof of purchase. If any of these documents is missing, only sales return or chargeable service will be provided.
- If the SYNCO product is out of the warranty coverage, the service and the parts cost will be charged.

Guangzhou Zhiying Technology Co., Ltd

📍 Block 15th, No.200 Fangcun Avenue East, Liwan District, Guangzhou, China, 510000
✉ support@syncoaudio.com
🌐 www.syncoaudio.com
📱 https://www.facebook.com/syncomicrophones

WARRANTY CERTIFICATE	
Please register your warranty. Meanwhile, you are welcomed to contact us via Email: support@syncoaudio.com	
USER INFORMATION	Customer Name:
	Phone Number:
	Email:
	Address:
SALES INFORMATION	Sales Date:
	Model:
	Product Code:
	Dealer:
REPAIR RECORD	Service Date:
	Technician:
	Issue:

RESULT ☐ Solved ☐ Unsolved ☐ Returned(Replaced)

